

# ComPair Geometry for Beam Test Simulations.

Michela Negro

October 20, 2019

ComPair is composed of three main subsystems: a double sided silicon detector (the tracker), a CZT calorimeter, and CsI calorimeter. A simplified view of the geometry is shown in Fig. ?? . OIn this document it is reported the description of the geometry used for beam test simulations. The whole setup is built making use of the files described in the following sections.

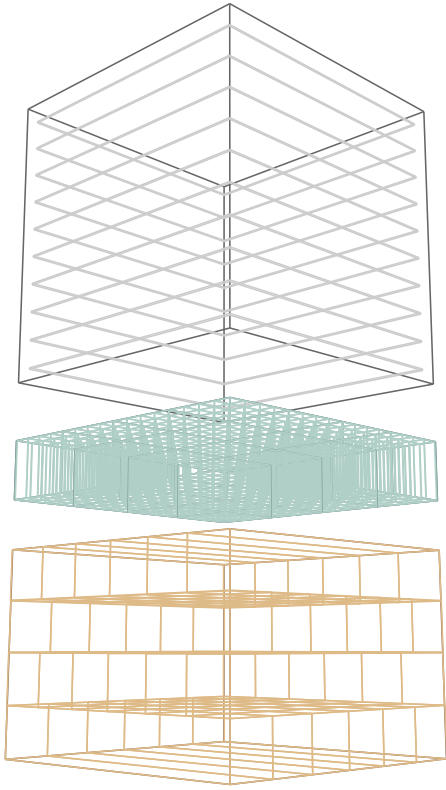


Figure 1: ComPair geometry.

## 1 DSSDTracker.geo

The following volumes compose the tracker system geometry:

- Tracker: void box (10x10x10) cm
- Wafer: Si box (9.5x9.5x0.05) cm
- SiStripLayer: void box containing 1 wafer (same wafer dimensions)

A for loop fit 10 layers (containing one wafer each) to the tracker volume.

```
//-----//-----//-----//
//-----//      DSSD TKR      //-----//
//-----//-----//-----//
```

```
Volume Tracker
Tracker.Material Vacuum
Tracker.Visibility 1
Tracker.Color 13
Tracker.Shape BRIK 5. 5. 5.

Volume SiStripLayer
SiStripLayer.Material Vacuum
SiStripLayer.Visibility 0
SiStripLayer.Shape BOX 4.75 4.75 0.025

Volume Wafer
Wafer.Material Silicon
Wafer.Visibility 1
Wafer.Color 17
Wafer.Shape BOX 4.75 4.75 0.025
Wafer.Mother SiStripLayer

For I 10 -4.5 1.0
    SiStripLayer.Copy SiStripLayer_%I
    SiStripLayer_%I.Position 0.0 0.0 $I
    SiStripLayer_%I.Mother Tracker
Done

//-----//
```

## 2 DSSDTkrProperties.det

From Carolyn's branch: Define Silicon Planes and whole volume to contain planes. The Total number of strips is given by the width of a plane/(strip pitch). We assume a strip pitch of 0.50 mm.

```
//-----//-----//-----//
//-----//      DSS TKR Properties      //-----//
//-----//-----//-----//
```

```
MDStrip2D      SStrip
SSStrip.SensitiveVolume Wafer
SSStrip.DetectorVolume Wafer

SSStrip.StructuralPitch 0.0 0.0 1.0
SSStrip.StripNumber 190.0 190.0
SSStrip.Offset 0.0 0.0

#### Set Physical properties of planes/strips
SSStrip.NoiseThreshold 40
SSStrip.TriggerThreshold 60
```

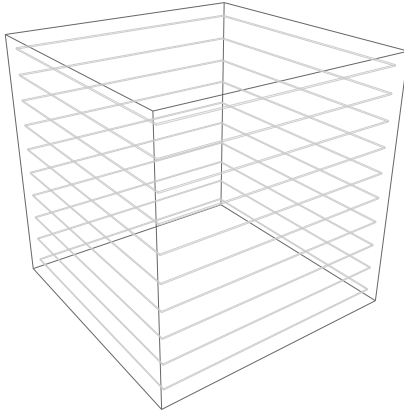


Figure 2: Two views of the tXracker system.

```
SStrip.EnergyResolution Gauss 662 662 8.5
SSstrip.EnergyResolution Gauss 122 122 4.38
//-----//
```

---

### 3 CZTCalorimeter.geo

The following volumes compose the CZT Calorimeter geometry:

- CZTBar: CZT box (0.8x0.8x4) cm
- CZTBlock: void box (2.5x2.5x2) cm
- CZTLayer: void box (40x40x4.2) cm

A CZT block contains 4x4 CZT bars; The single CZT layer contains 4x4 CZT blocks.

```
//-----//-----//-----//
//-----//      CZT CAL      //-----//
//-----//-----//-----//
```

---

```
Volume CZTBar
CZTBar.Visibility 1
CZTBar.Color 29
CZTBar.Material CZT
```

```
CZTBar.Shape BRIK 0.3 0.3 1.0
```

```
Volume CZTBlock
CZTBlock.Visibility 1
CZTBlock.Color 31
CZTBlock.Material Vacuum
CZTBlock.Shape BRIK 1.25 1.25 1.
```

```
Volume CZTLayer
CZTLayer.Material Vacuum
CZTLayer.Visibility 1
CZTLayer.Color 36
CZTLayer.Shape BRIK 5.0 5.0 1.
```

```
For I 4 -0.93 0.62
  For J 4 -0.93 0.62
    CZTBar.Copy CZTBar_%I_%J
    CZTBar_%I_%J.Position $I $J 0.0
    CZTBar_%I_%J.Mother CZTBlock
  Done
Done
```

```
For I 4 -3.75 2.5
  For J 4 -3.75 2.5
    CZTBlock.Copy CZTBlock_%I_%J
    CZTBlock_%I_%J.Position $I $J 0.0
    CZTBlock_%I_%J.Mother CZTLayer
  Done
Done
```

```
//-----//
```

---

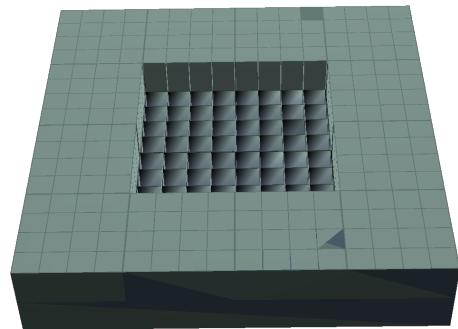
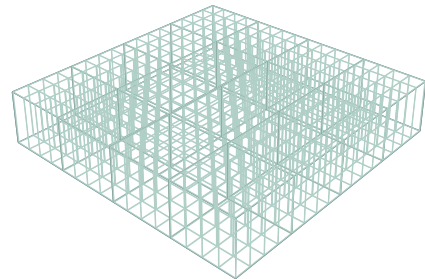


Figure 3: Two views of the CZT calorimeter.

## 4 CZTProperties.det

From Carolyn's branch. The Anger Camera gives an energy weighted position: if there are more than one interaction in a single detector volume, only a single position will be returned (this is how we expect the CZT to behave).

```
//-----//-----//-----//
//-----// CZT Cal Properties //-----//
//-----//-----//-----//

AngerCamera DCalCZT
DCalCZT.SensitiveVolume CZTBar

DCalCZT.Positioning XYZ
DCalCZT.PositionResolution 200 0.1
DCalCZT.PositionResolution 1000 0.3

#### Calibration data:
DCalCZT.TriggerThreshold 50
DCalCZT.NoiseThresholdEqualsTriggerThreshold true

DCalCZT.EnergyResolution Gauss 40 40 1.8
DCalCZT.EnergyResolution Gauss 100 100 2
DCalCZT.EnergyResolution Gauss 500 500 2.5
DCalCZT.EnergyResolution Gauss 1000 1000 5
DCalCZT.EnergyResolution Gauss 2000 2000 10
DCalCZT.EnergyResolution Gauss 5000 5000 25
//-----//
```

## 5 CsICalorimeter.geo

The following volumes compose the CsI calorimeter geometry:

- CsILog: CsI box (10x1.67x1.67) cm
- CsITower: void box (10x10x6.68) cm

The tower is made of 4 layers, made of 6 logs each, in hodoscopic configuration.

```
//-----//-----//-----//
//-----// CsI CAL //-----//
//-----//-----//-----//
```

```
Volume CsILog
CsILog.Material CsI
CsILog.Visibility 1
CsILog.Color 42
CsILog.Shape BOX 5.0 0.835 0.835
```

```
Volume CsITower
CsITower.Material Vacuum
CsITower.Visibility 1
CsITower.Color 28
CsITower.Shape BRIK 5. 5. 3.34
```

```
For I 6 -4.165 1.67
  CsILog.Copy CsILog_y_%I_1
  CsILog_y_%I_1.Position 0.0 $I 2.505
  CsILog_y_%I_1.Mother CsITower
Done
```

```
For I 6 -4.165 1.67
```

```
CsILog.Copy CsILog_x_%I_1
CsILog_x_%I_1.Rotation 0 0 90
CsILog_x_%I_1.Position $I 0.0 0.853
CsILog_x_%I_1.Mother CsITower
Done

For I 6 -4.165 1.67
  CsILog.Copy CsILog_y_%I_2
  CsILog_y_%I_2.Position 0.0 $I -0.835
  CsILog_y_%I_2.Mother CsITower
Done

For I 6 -4.165 1.67
  CsILog.Copy CsILog_x_%I_2
  CsILog_x_%I_2.Rotation 0 0 90
  CsILog_x_%I_2.Position $I 0.0 -2.505
  CsILog_x_%I_2.Mother CsITower
Done

//-----//
```

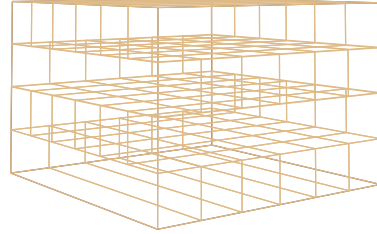


Figure 4: Two views of the CsI calorimeter.

## 6 CsIProperties.det

From Carolyn's branch. The CsILogs have no space in between them at this point, so the structural pitch and structural offset are both 0.

```
//-----//-----//-----//
//-----// CsI Cal Properties //-----//
//-----//-----//-----//
```

```
MDCalorimeter DCalCsI
DCalCsI.SensitiveVolume CsILog
DCalCsI.DetectorVolume CsITower
```

```
DcalCsI.StructuralPitch 0. 0. 0.
DcalCsI.StructuralOffset 0. 0. 0.
```

```
DcalCsI.NoiseThreshold 30
DcalCsI.TriggerThreshold 100
DcalCSI.DepthResolution 662 2
```

```
DcalCsI.EnergyResolution Gauss 40 40 5
DcalCsI.EnergyResolution Gauss 100 100 7.5
DcalCsI.EnergyResolution Gauss 662 662 20
DcalCsI.EnergyResolution Gauss 2000 2000 33
DcalCsI.EnergyResolution Gauss 5000 5000 50
```

```
//-----//
```

## 7 ComPairBase.geo.setup

This file includes the files discussed above, locates the sub-systems in the world volume, and defines the basic event triggers.

```
//-----//-----//-----//
//-----//      PARAMETERS      //-----//
//-----//-----//-----//
```

```
////////////////////////////////
// Name and Version //
////////////////////////////////
Name ComPair4BeamTest
Version 0.0
```

```
////////////////////////////////
// Include section //
////////////////////////////////
Include ../materials/Materials.geo
```

```
////////////////////////////////
// Some other settings //
////////////////////////////////
DefaultRangeCut 0.000002
SurroundingSphere 150.0 0.0 0.0 0.0 150.0
```

```
//-----//-----//-----//
//-----//      DETECTORS      //-----//
//-----//-----//-----//
```

```
////////////////////////////////
// World volume //
////////////////////////////////
Volume World
World.Material Vacuum
World.Visibility 0
World.Color 0
World.Shape BRIK 500. 500. 500.
World.Mother 0
//-----//
```

```
////////////////////////////////
// Tracker SiStrip //
////////////////////////////////
Include DSSDTracker.geo
Include DSSDTkrProperties.det
```

```
Tracker.Position 0. 0. 0.
Tracker.Mother World
//-----//

////////////////////////////////
// CZT calorimeter //
////////////////////////////////
Include CZTCalorimeter.geo
Include CZTProperties.det
CZTLayer.Position 0.0 0.0 -8.0
CZTLayer.Mother World
```

```
//-----//
```

```
////////////////////////////////
// CsI calorimeter //
////////////////////////////////
Include CsICalorimeter.geo
Include CsIProperties.det
CsITower.Position 0.0 0.0 -14.0
CsITower.Mother World
```

```
//-----//-----//-----//
//-----//      TRIGGERS      //-----//
//-----//-----//-----//
```

```
////////////////////////////////
// CsI CAL TRIGGER //
////////////////////////////////
//### 2 hits in Si Detector and one hit in the CsI
cal
Trigger MainTriggerCsI
MainTriggerCsI.Veto false
MainTriggerCsI.TriggerByDetector true
MainTriggerCsI.Detector SStrip 2
MainTriggerCsI.Detector DCalCsI 1
```

```
////////////////////////////////
// CZT CAL TRIGGER //
////////////////////////////////
//### 2 hits in Si Detector and one hit in the CZT
cal
Trigger MainTriggerCZT
MainTriggerCZT.Veto false
MainTriggerCZT.TriggerByDetector true
MainTriggerCZT.Detector SStrip 2
MainTriggerCZT.Detector DCalCZT 1
```

```
////////////////////////////////
// DSSD TKR TRIGGER //
////////////////////////////////
//### only 2 hits in Si Detector
Trigger MainTriggerSi
MainTriggerSi.Veto false
MainTriggerSi.TriggerByChannel true
MainTriggerSi.Detector SStrip 2
```

```
//-----//
```